



i-ais-AN1

AIS AtoN (Aids-to-Navigation) Station

Installation and User Manual

Rev. 2.1




2011

IMPORTANT NOTICES

- The operator of this equipment must read and follow the descriptions in this manual.
- Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from iDeal Teknoloji.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
The example illustrations shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by iDeal Teknoloji will cancel the warranty.
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

SAFETY INSTRUCTIONS

The operator and installer must read the applicable safety instructions before attempting to install or operate the equipment.

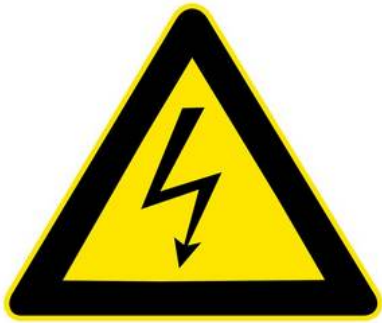

Warning: Switch-off Power Supply

Only install or remove the device when disconnected!
Before maintenance work the device shall be disconnected.



Warning: Product Installation

This equipment must be installed in accordance with the iDeal Teknoloji instructions provided. Failure to do so could result in poor product performance, personal injury, and/or damage to the station.



Safety Notice: RF Radiation Statement

Your **i-ais-AN1** AtoN Station generates and radiates radio frequency (RF) electromagnetic energy.

Revision History

Revision	Date	Notes	Prepared by
v1.0	12.10.2009	Draft	Taner AKDENİZ
v1.1	13.10.2009	General update	Sedef ÜSTÜNDAĞ
V1.2	19.10.2009	Update about images	Sedef ÜSTÜNDAĞ
V1.3	26.11.2009	General update	Taner AKDENİZ
V1.4	31.12.2009	General update	Taner AKDENİZ
V1.5	30.03.2010	Update for Approvals	Taner AKDENİZ
V1.6	08.10.2010	Update for Power Consumption	Taner AKDENİZ
V1.7	28.10.2010	Corrections	Taner AKDENİZ
V1.8	19.04.2011	Corrections	Taner AKDENİZ
V1.9	18.07.2011	Update for BSH Requirements	Taner AKDENİZ
V2.0	27.07.2011	Update for Remark for VHF Antenna VSWR	Taner AKDENİZ
V2.1	11.10.2011	BSH Cert.	Taner Akdeniz

TABLE OF CONTENTS

1.	AIS System General Information.....	6
1.1.	How does AIS Work?	6
1.2.	AIS Classes	7
2.	What is AIS AtoN (Aids-to-Navigation)?.....	9
3.	i-ais-AN1 General Information, Basic Parts and Configuration.....	10
3.1.	i-ais-AN1 Electronic Interface.....	10
3.2.	i-ais-AN1 Connectors.....	11
3.3.	Basic Configuration	12
3.4.	Mechanical Drawing of i-ais-AN1	13
4.	Installation Guidelines	14
4.1.	i-ais-AN1 Installation Procedure	14
4.2.	Antenna Installation Precautions.....	14
4.3.	Cabling.....	15
4.4.	Required Tools	16
4.5.	Installation Check Out	16
5.	Post Installation Configuration	17
6.	Specifications	18
7.	Approvals & Declaration of Conformity.....	20
8.	Warranty Information.....	23
9.	Contact Information.....	24

1. AIS System General Information

The Automatic Identification System (AIS) is a short range coastal tracking system used on ships and by Vessel Traffic Services (VTS) for identifying and locating vessels by electronically exchanging data with other nearby ships and VTS stations. More detailed, AIS is a broadcast system, operating in the VHF maritime mobile band that is capable of sending ship information such as identification, position, course, speed and more, to other ships and to shore. It can handle multiple reports at rapid update rates and uses high technology to meet these high broadcast rates and ensure reliable and robust ship-to-ship operation.

It has long been realized that an automatic electronic reporting device fitted to a ship would be beneficial to the safety of navigation and the identification and monitoring of maritime traffic. Thus, AIS uses the maritime mobile VHF band for the transmission and reception of its data signals.

AIS allows automatic exchange of shipboard information from the vessel's sensors, including static and voyage related data between one vessel and another and between a vessel and a shore station(s).

Each AIS system consists of one VHF transmitter, two VHF TDMA receivers, one VHF DSC receiver, and a standard marine electronic communications link (IEC 61162/NMEA 0183) to shipboard display and sensor systems. Position and timing information is normally derived from an integral or external global navigation satellite system receiver, including a medium frequency differential GNSS receiver for precise position in coastal and inland waters. Other information broadcast by the AIS, if available, is electronically obtained from shipboard equipment through standard marine data connections. Heading information and course and speed over ground would normally be provided by all AIS-equipped ships. Other information, such as rate of turn, angle of heel, pitch and roll, and destination could also be provided.

1.1. How does AIS Work?

Each station determines its own transmission schedule (slot), based upon data link traffic history and knowledge of future actions by other stations. A position report from one AIS station fits into one of 2250 time slots established every 60 seconds. AIS stations continuously synchronize themselves to each other, to avoid overlap of slot transmissions. Slot selection by an AIS station is randomized within a defined interval, and tagged with a random timeout of between 0 and 8 frames. When a station changes its slot assignment, it pre-announces both the new location and the timeout for that location.

In these way new stations, including those stations which suddenly come within radio range close to other vessels will always be received by those vessels.

The required ship reporting capacity according to the IMO performance standard amounts to a minimum of 2000 time slots per minute, though the system provides 4500 time slots per minute. The SOTDMA broadcast mode allows the system to be overloaded by 400 to 500% through sharing of slots, and still provide nearly 100% throughputs for ships closer than 8 to 10 NM to each other in a ship to ship mode. In the event of system overload, only targets further away will be subject to drop-out, in order to give preference to nearer targets that are a primary concern to ship operators. In practice, the capacity of the system is nearly unlimited, allowing for a great number of ships to be accommodated at the same time.

The system coverage range is similar to other VHF applications, essentially depending on the height of the antenna. Its propagation is slightly better than that of radar, due to the longer wavelength, so it's possible to "see" around bends and behind islands if the land masses are not too high. A typical value to be expected at sea is nominally 20 nautical miles. With the help of repeater stations, the coverage for both ship and VTS stations can be improved considerably.

The system is backwards compatible with digital selective calling systems, allowing shore-based GMDSS systems to inexpensively establish AIS operating channels and identify and track AIS-equipped vessels, and is intended to fully replace existing DSC-based transponder systems.

1.2. AIS Classes

The standardization and development of the "AIS Class-B," which is more adaptable to small vessels (non-SOLAS vessels), is making progress by reducing the price of the AIS (AIS Class-A), which is the requirement of the Convention.

Class A: Ship borne mobile equipment intended for vessels meeting the requirements of IMO AIS carriage requirement.

Class B: Ship borne mobile equipment provides facilities not necessarily in full accord with IMO AIS carriage requirements.

Below table, message contents of Class A and Class B are compared.

Identifier Information	CLASS A		CLASSB	
	Transmit	Receive	Transmit	Receive
MMSI # (Maritime Mobile Service Identity)	X	X	X	X
Navigation Status (ex 'At Anchor. "Under Way". "Not Under Way")	X	X		X
Rate of Turn - Right or Left	X	X		X
Speed over Ground - 1/10 Knot Resolution from 0 to 102 Knots	X	X	X	X
Position Accuracy - Differential.' GPS	X	X	X	X
Longitude	X	X	X	X
Course over Ground - Relative to True North	X	X	X	X
True Heading - 0 to 359 Degrees Derived from Gyro input	X	X	X	X
Time Stamp - The Universal Time to Nearest Second	X	X	X	X
IMO Number - Unique Reference able Identification	X	X		X
Radio Call Sign	X	X	X	X
Name of Ship	X	X	X	X
Type of Ship/Cargo	X	X	X	X
Location on Ship of Reference Point for Position	X	X	X	X
Type of Position Fixing Device	X	X	X	X
Draught of Ship - 1/10 Meter to 25 5 Meters	X	X		X
Destination	X	X		X
Estimated Time of Arrival at Destination	X	X		X

2. What is AIS AtoN (Aids-to-Navigation)?

AIS AtoN is a special type of AIS station fitted to an existing physical Aid to Navigation (e.g. buoy or lighthouse) can provide real-time status and positive identification of the AtoN. This equipment can also provide additional information to surrounding ships or back to a shore authority on e.g. actual tidal height and local weather. In the case of a floating aid an accurate position (corrected by DGNSS) can be provided to check that it is on-station, and real-time 'health' information can be sent back for performance monitoring. A variant ('synthetic AtoN') entails using a communication link from the AtoN to an AIS-shore station, providing AIS broadcasts for the AtoN where it is impractical or uneconomic to fit the AIS unit to the AtoN itself.

Virtual AtoN: In other cases, it may be appropriate to create an apparent ('virtual') AtoN on a display for a certain location, even though there is no physical AtoN there. The associated information would clearly identify this as a virtual AtoN and safeguards would be needed against false representations. There are some cases where virtual AtoN could be very useful, for example marking a new wreck until an actual buoy can be established, although the effectiveness of AIS as an AtoN reduces at sites close to the 30-mile limit. As the concept becomes established it offers the potential to act as a permanent AtoN service, but confidence that progress could be made internationally on e-navigation, for a wide range of craft, would be needed before its use could become widespread.


3. i-ais-AN1 General Information, Basic Parts and Configuration

3.1. i-ais-AN1 Electronic Interface

The definition of connectors for i-ais-AN1 is given below.

25.11.2009

i-ais-AN1 Konnektör Tanımları

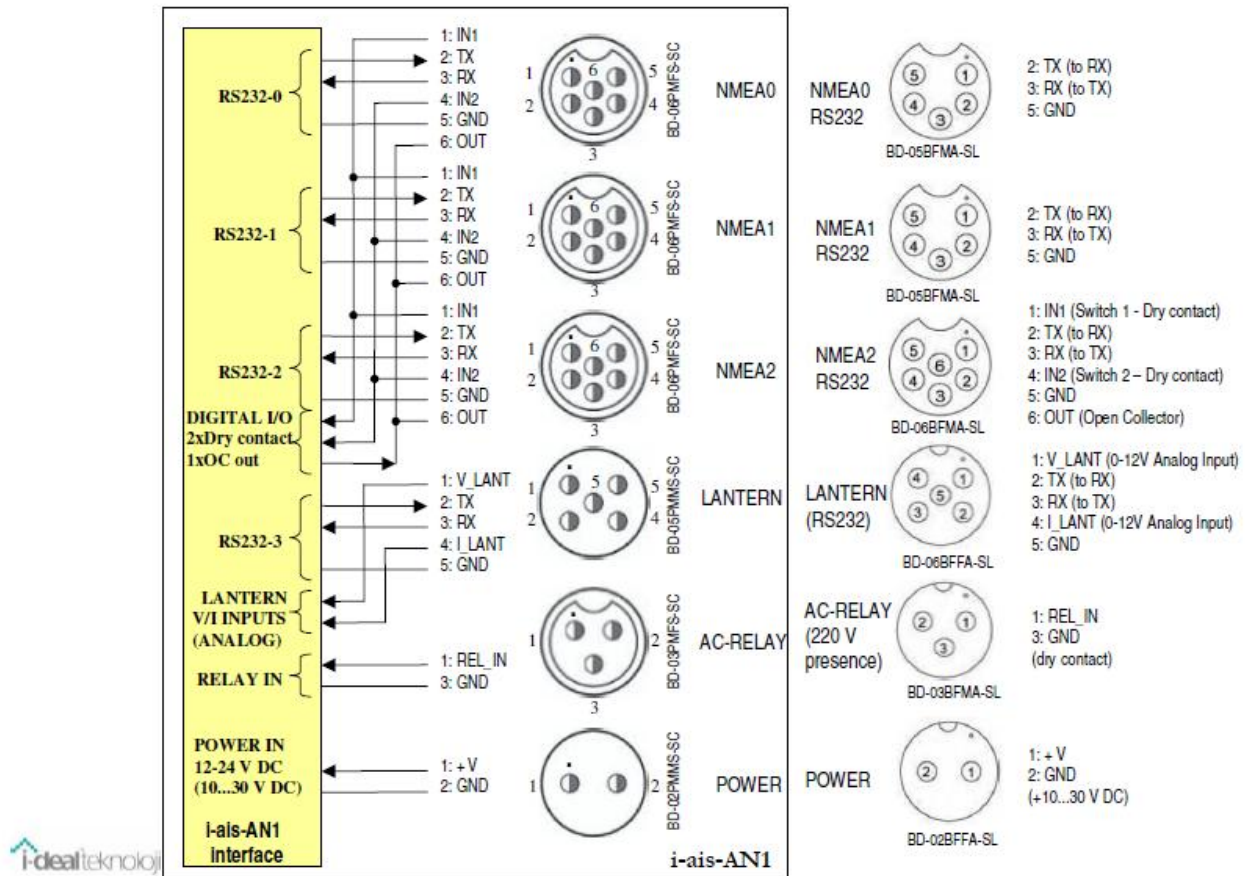


3.2. i-ais-AN1 Connectors

The top view of i-ais-AN1 connectors is as follows:




3.3. Basic Configuration

The basic configuration of the i-ais-AN1 is as follows.

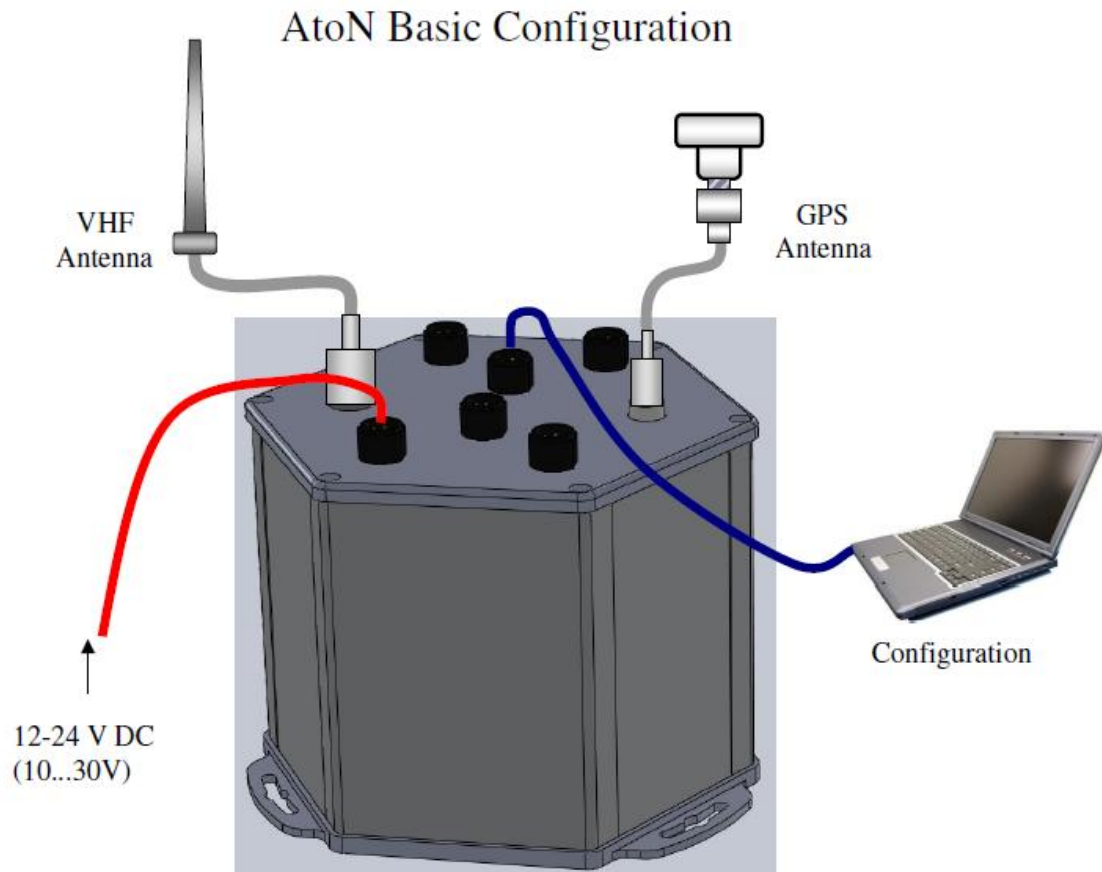

The i-ais-AN1 can be configured with a special SW run on the PC connected to NMEA0 port.

3.4. Mechanical Drawing of i-ais-AN1

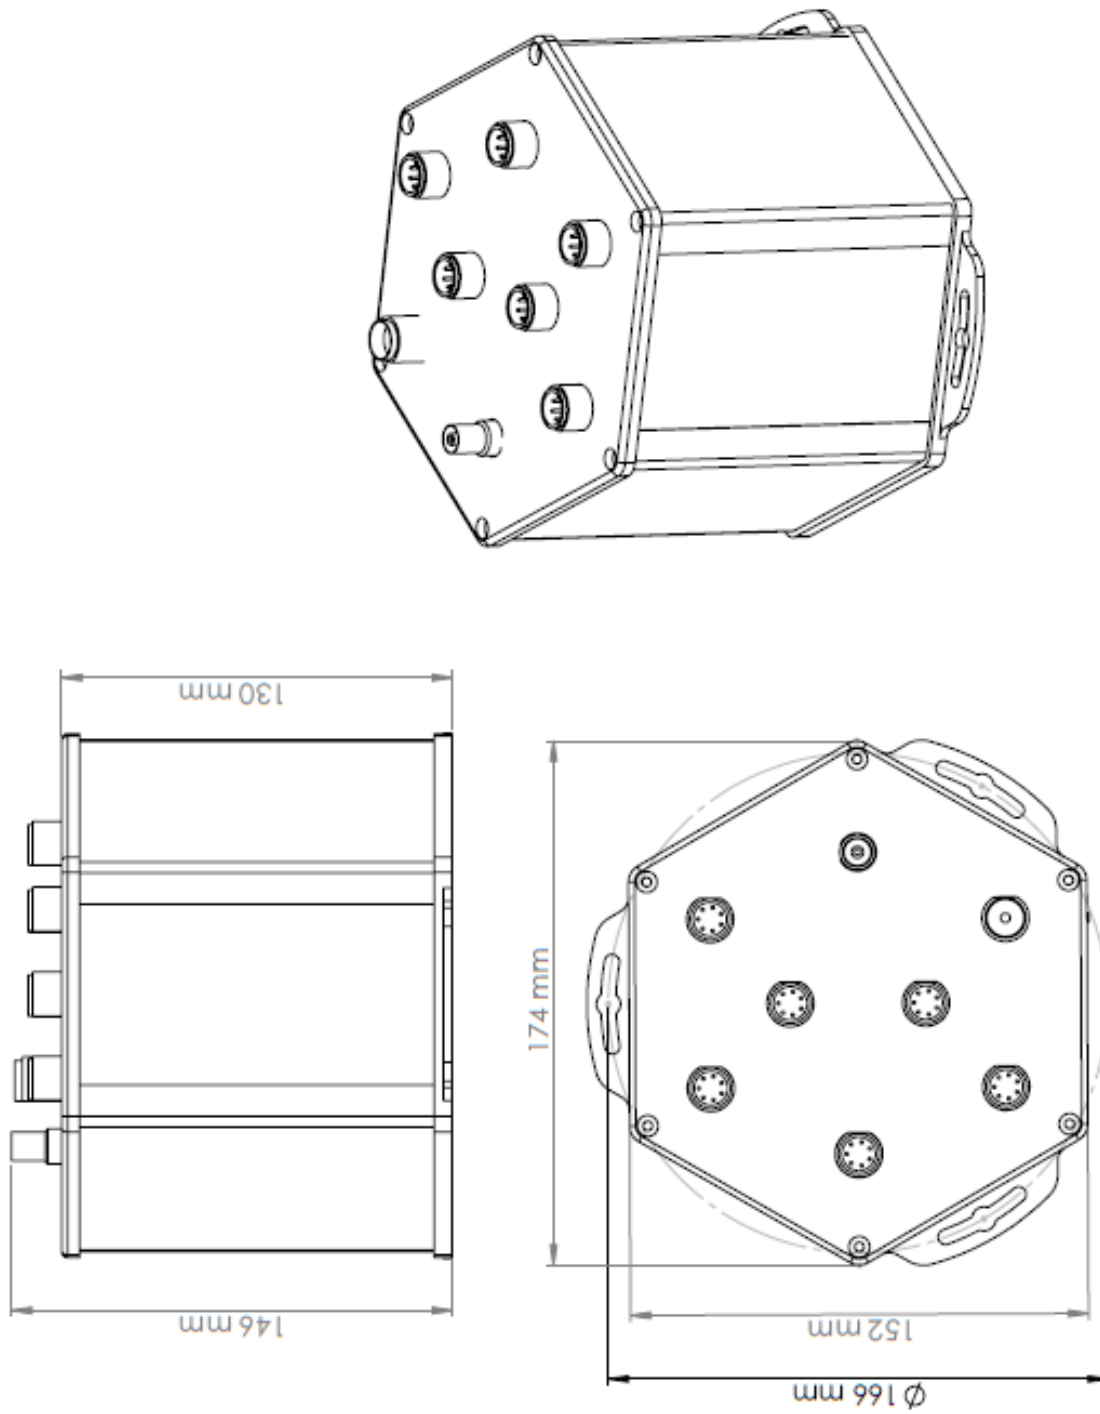

4. Installation Guidelines

4.1. i-ais-AN1 Installation Procedure

The i-ais-AN1 AIS AtoN equipment can be installed any flat surface with only three screws. The base plate of the equipment is designed for an easy installation considering the harsh environments not allow working long time.

After the fixing of screws, connection of antennas (VHF and GPS) and power cables is enough for a basic AtoN operation.

The i-ais-AN1 should be installed and operated in a “Protected” environment as defined in IEC 60945 Section 4.4.

REMARK: For a proper operation, i-ais-AN1 should be installed with a VHF antenna which has a VSWR value of 1.5:1 or better, with connecting RF cable.

4.2. Antenna Installation Precautions

The antenna should be well removed from any major protrusions, such as buoy/light house rotating beacon engine and antenna/conductor masts. It should also be as far as practical from gear doors, access doors, or other openings that could affect its radiation pattern.

The antenna should be mounted on the maintenance ring of the buoy or light house barrier. Avoid mounting the antenna within three feet of the any other communication antenna.

If the antenna is being installed on a composite buoy/light house, ground planes must sometimes be added. Conductive wire mesh, radials, or thin aluminum sheets embedded in the composite material provide the proper ground plane allowing the antenna pattern (gain) to be maximized for optimum transponder performance.

The GPS antenna used must be of the active type and must be suitable for marine shipboard applications (index of protection, ruggedness, means of mounting, etc.). An antenna should be selected with a gain (in dB) depending on the length of cable between the antenna and the AtoN unit; after subtraction of cable and connector losses a minimum total gain of 25 dB should be available at the AtoN unit GPS antenna connector.

The GPS antenna used must be a dedicated antenna, i.e. not shared with any other GPS receiver. Installation of the GPS antenna is critical for the performance of the built in GPS receiver which is used for timing of the transmitted time slots.

The GPS antenna should be mounted in an elevated position and free of shadow effect from the buoy/light house structure and should have a free view through 360 degrees with a vertical angle of 5 to 90 degrees above the horizon.

As the received GPS signal is very sensitive to noise and interference generated by other onboard transmitters, ensure that antenna is placed as far away as possible from racon/radar transmitters and ensure the GPS antenna is free from direct view of the racon/radar antenna beam. It is also important that the MF/HF and other VHF transmitter antennas are kept as far away as possible from the antenna.

The VHF antenna should be a dedicated antenna, i.e. not shared with any other VHF transmitter/receiver. It also should be suitable for marine buoy/light house applications (index of protection, ruggedness, means of mounting, etc.)

The VHF antenna should be mounted with at least a two meter vertical separation distance from any other VHF antenna used for speech or DCS communication, at least 2-3 meters above sea level for full performance.

Connecting a badly mismatched VHF antenna, leaving the VHF antenna port disconnected, or shorting the VHF antenna port will activate the VSWR alarm, cause the unit to stop sending position reports or cause damage to the transponder.

To meet the requirements for Radio Frequency Exposure it is necessary to install the VHF antenna correctly and operate the i-ais-AN1 equipment according to the instructions. The table below shows suitable safety distances to other equipment that could cause interference with the AtoN Transponder.

Object Safety distance:

Radar antenna, X-band	1, 5 m (5 ft)
High efficiency engine	1 m (3 ft)
HF or VHF antennas	3 m (10 ft)
AC power cables with high current	1 m (3 ft)

4.3. Cabling

The RF coaxial cables should be kept as short as possible to minimize attenuation of the signal. Double shielded coaxial cables equal to or better than LMR200/LMR240 (for GPS) and LMR400 (for VHF) are recommended.

All outdoor connectors on the coaxial cables should be fitted with preventive isolation, such as shrink-stocking with silicone to protect the antenna cable against water penetration. Coaxial cables should be installed in separate signal cable channels/tubes, and at least 10 cm away from any power supply cables. Crossing of cables should take place at right angles (90°).

Coaxial cables should not be exposed to sharp bends, which may lead to changes to the characteristic impedance of the cable. The minimum bend radius should be 5 times the cables outside diameter.

4.4. Required Tools

The basic set of tools used during the installation of i-ais-AN1 is as given in the list below.

- Screw drivers
- Crimp tools
- Utility knife
- Socket Wrench Set
- Wrench set
- Hex Key Set
- Wire cutters and strippers

4.5. Installation Check Out


As the installation of i-ais-AN1 is completed, the following basic points should be checked as an initial step, before the operational check out of the equipment:

- 12 -24 VDC Power connection
- VHF Antenna connection
- GPS Antenna connection

5. Post Installation Configuration

The i-ais-AN1 equipment shall be configured using a special interface software, “i-AIS NMEA Assistant”. The assistant SW can be run on a PC connected through the NMEA0 port.

Besides the configuration of the equipment, the operational check of the equipment can be performed using this SW.

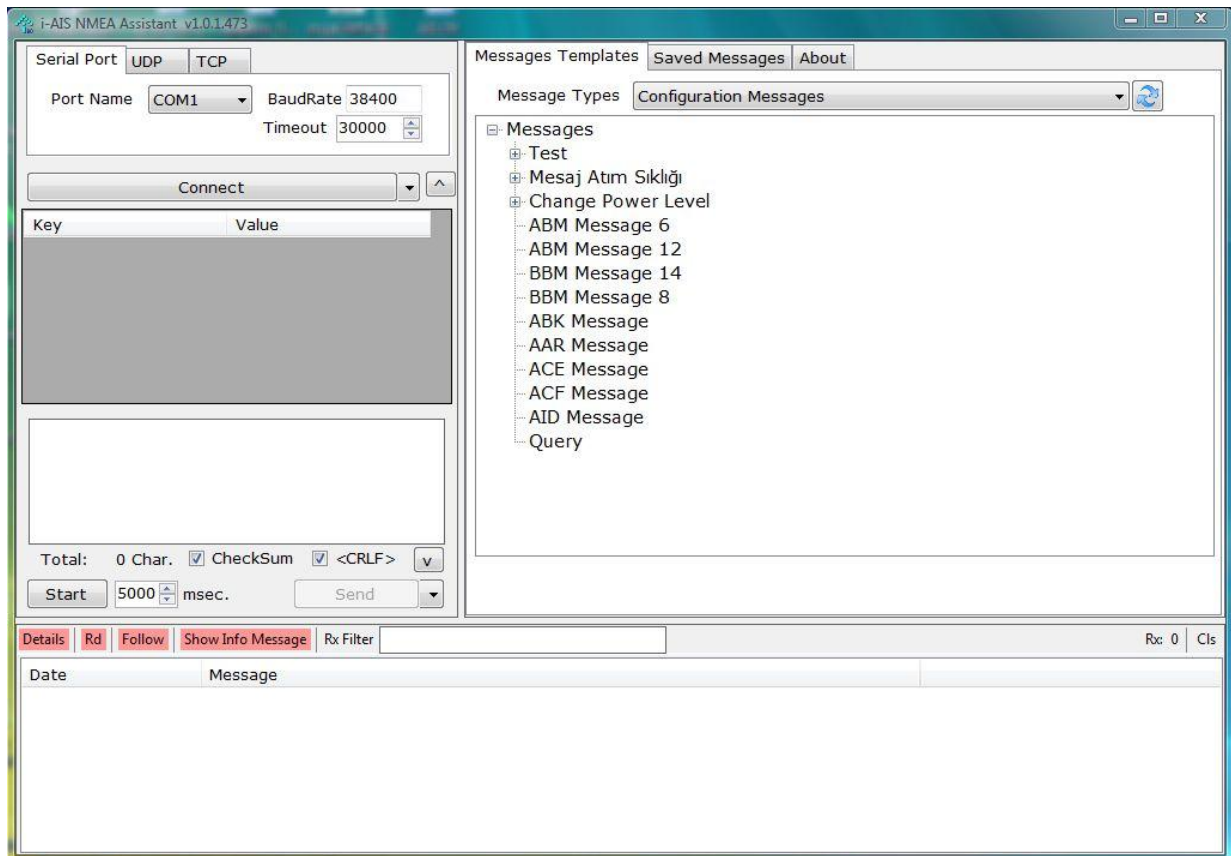

6. Specifications

GENERAL	
Operating Temperature Range	-15°C to +55° C
Storage Temperature Range	-30°C to +70° C
Humidity	Up to 93% at 40°C non-condensing
Power Supply Voltage	12V – 24V DC (max 10V – 30V DC)
Rated Fuse Current	8A with slow burning fuse
Supply Current	Type-I (FATDMA only mode) 30mA nominal, 4A peak (during transmission) @ 12V 25mA nominal, 2A peak (during transmission) @ 24V Type-III (RATDMA + FATDMA mode) 220mA nominal, 4A peak (during transmission) @ 12V 130mA nominal, 2A peak (during transmission) @ 24V
Power Consumption (Type – I, FATDMA only mode - Transmission of Msg 21 every 3 minutes in accordance with IEC 62320-2)	< 0.8Ah/day @ 12V
Size	152 mm x 174 mm x 146 mm
Weight	1.75kg
Connectors	VHF Antenna: N Female GPS Antenna: TNC Female NMEA0, NMEA1, NMEA2, POWER, LANTERN, AC-RELAY: Circular Plastic Connectors
Case	AlMg0,5Si 6063
Case IP Rating	IP-66
TRANSMITTER	
Operating Frequency Range	156.025 – 162.025 MHz
Channel Spacing	25 kHz
Transmitter Output Power	12.5W (41dBm) nominal 2W (33dBm) low power mode
Modulation	GMSK
RECEIVER (Type III only)	
# of Receivers	2 (simultaneous operation)
Operating Frequency Range	156.025 – 162.025 MHz
Channel Spacing	25 kHz
Receiver Sensitivity	Better than -107dBm
Co-Channel Rejection	Better than 10 dB
Adjacent Channel Selectivity	> 70 dB
Spurious Response Rejection	> 70 dB
Intermodulation Response Rejection	> 65 dB
Blocking or Desensitization	> 86 dB
Spurious Radiation (conducted)	< -57 dBm

STANDARDS	
AIS	IEC 62320-2, <i>Maritime navigation and radiocommunication equipment and systems – Automatic identification system (AIS) – Part 2: AIS AtoN Stations – Operational and performance requirements, methods of testing and required test results</i> ITU-R M.1371-3, <i>Technical Characteristics for an Automatic Identification System Using Time Division Multiple Access in the VHF Maritime Mobile Band</i> IMO Res. MSC.74(69), Annex 3, <i>Recommendations on Performance Standards for a Universal Shipborne Automatic Identification System (AIS)</i> IALA Rec. A-126 <i>The Use of the Automatic Identification System (AIS) in Marine Aids to Navigation Services</i>
EMC	ETSI EN 301 843-1 <i>Electromagnetic compatibility and Radio spectrum Matters (ERM);</i> <i>Electromagnetic Compatibility (EMC) standard for marine radio equipment and services; Part 1: Common technical requirements</i>
Environment (Including vibration)	IEC 60945 <i>Maritime navigation and radio communication equipment and systems – General requirements – Methods of testing and required test results</i>
Safety	IEC 60950-1 <i>Information Technology Equipment – Safety – Part 1: General Requirements</i>
APPROVALS	
CE Type Approval per R&TTE Directive-99/5/EC	
BSH, Statement of Conformity per IEC62320-2 & ITU-R M.1371-4	
GPS RECEIVER	
# of Channels	16
Time to First Fix	29s Cold Start 29s Warm Start <1s Hot Start
Receiver Sensitivity	-160 dBm Tracking -160 dBm Reacquisition -144 dBm Cold Start

7. Approvals & Declaration of Conformity



Expertise

Expert Opinion of the Notified Body on the Conformity Assessment
according to Article 10.5 of R&TTE Directive 1999/5/EC

PHOENIX TESTLAB
EU Identification Number 0700

Recognized by  Bundesnetzagentur

ENEA-A-05-0051-05

Expertise No.	09-112004
Certificate Holder	iDeal Teknoloji Bilisim Cozumleri A.S.
Address	Cumhuriyet Caddesi, Yeni Parseller Sokak, No: 20, B Blok Kavackik, 34805 Istanbul Turkey
Product Description	AIS AtoN Station
Brand Name / Model Name	i-ais / i-ais-AN1
Frequency Range	156.025 MHz – 162.025 MHz
Transmitted Power	41 dBm
Opinion on the Essential Requirements	
Article 3.1a): Health and Safety	Remarks see Annex
Article 3.1b): Electromagnetic Compatibility	Remarks see Annex
Article 3.2: Effective Use of the Radio Spectrum	No remarks
Article 3.3: Additional Requirements	NOT assessed

CE-marking

Marking Example (Class 2) **CE 0700** 

This certificate is issued in accordance with the Directive 1999/5/EC of the European Parliament and the Council on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity dated 9th March 1999 and is only valid in conjunction with the following annex (3 pages).

Blomberg, 22 January 2010

Place, Date of Issue




Signed by Holger Bente
Notified Body

Phone +49(0)5235-9500-24
Fax +49(0)5235-9500-28
notifiedbody@phoenix-testlab.de

PHOENIX TESTLAB GmbH
Königswinkel 10
D-32825 Blomberg, Germany
www.phoenix-testlab.de



Bundesrepublik Deutschland

Federal Republic of Germany

Bundesamt für Seeschifffahrt und Hydrographie
Federal Maritime and Hydrographic Agency



BUNDESAMT FÜR
SEESCHIFFFAHRT
UND
HYDROGRAPHIE

Konformitätsbestätigung

Statement of Conformity No.

Nr. BSH/46162/4321408/11

Die nautische Ausrüstung
The nautical equipment

AIS AtoN

mit der Typbezeichnung
with the type designation

i-ais-AN1

des Herstellers
manufactured by

iDeal Teknoloji Bilisim Cozumleri A.S.
Cumhuriyet Caddesi, Yeni Parseller Sokak,
No. 20, B Blok, K Binasi
34805 Kavacak / Istanbul
TURKEY

ist nach den folgenden Normen/Standards, soweit für diesen Ausrüstungsgegenstand
anwendbar, erfolgreich geprüft worden.

has been tested successfully according to the following standards as applicable for this equipment:

Norm/Standard	Prüfnorm/Test Standard
ITU-R M.1371-4 (as far as relevant for an AtoN)	IEC 62320-2 Ed.1 (2008)
	IEC 61108-1 (2003)
	IEC 60945 Ed.4 (2002)
	IEC 61162-1 Ed. 4 (2010)

Dem Antragsteller wie oben / as above
It is hereby confirmed to the applicant

wird die Eignung für den nachstehenden Verwendungszweck bestätigt:

that the equipment is suitable for use as:

AIS AtoN

Hamburg, 06.09.2011



Im Auftrag
By order

Ralf-Dieter Preuß
Ralf-Dieter Preuß



R&TTE Declaration of Conformity

We, the undersigned Manufacturer,

iDeal Teknoloji Bilişim Çözümleri A.Ş.
Cumhuriyet Caddesi, Yeni Parseller Sokak,
No: 20, B Blok, Kavacık,
İstanbul, Türkiye

declare under our sole responsibility that the following product:

Product Name : Automatic Identification System Aids-to-Navigation Station
Brand Name : iDeal Teknoloji
Model : i-ais-AN1

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC).

The product is in conformity with the following standards and/or other normative documents:

ETSI EN 301 843-1
EN 60950-1:2006 and/or IEC 60950-1:2005 (2nd Edition)
IEC 62320-2: Edition 1.0 2008-03
IEC 60945:2002

Notified Body Involved:
Phoenix Testlabs GmbH (Notified Body # 0700)
Königswinkel 10, D 32825, Blomberg
Germany

Technical File Held By:
iDeal Teknoloji Bilişim Çözümleri A.Ş.
Cumhuriyet Caddesi, Yeni Parseller Sokak,
No: 20, B Blok, Kavacık,
İstanbul, Türkiye

Place and date of issue : İstanbul / 18.01.2010

Signed for
iDeal Teknoloji Bilişim Çözümleri A.Ş.



Name : Taner AKDENİZ
Title : Product Quality Process Manager

CE 0700

iDeal Teknoloji Bilişim Çözümleri A.Ş.
CUMHURİYET CAD. YENİ PARSELLER SK. NO:20 B BLOK
KAVACIK ÖZÜK HAT KANAK KİRAZ BEYAZI İSTANBUL TÜRKİYE
[P] +90 216 680 87 87 [F] +90 216 680 87 04

→ www.idealteknoloji.com

8. Warranty Information

All iDeal products are warranted to be free from defects in materials or workmanship for **one year** from the date of purchase. Within this period, iDeal Technologies, Inc. will, at its sole option, repair or replace any components which fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident or unauthorized alterations or repairs.

9. Contact Information

iDeal Teknoloji Bilişim Çözümleri A.Ş.

Address: Cumhuriyet Caddesi, Yeni Parseller Sokak, No: 20, B Blok
Kavacık / İstanbul – TÜRKİYE

e-mail: info@idealteknoloji.com

Tel: +90-216-680 07 07

Faks: +90-216-680 07 04

Web: <http://www.idealteknoloji.com>